

600W SNOW MACHINE - AF1216

USER's MANUAL

Introduction:

To ensure the safety operation and long life use of this machine, we strongly suggest you follow the below instructions before your operation.

I. Specifications:

Product name: 600W Snow Machine

Model No.: AF1216

Input Voltage: AC240V / 50Hz

Power Consumption: 600W

Coverage Area: 30M²

Container Volume: 1L

Contents Inside: 600W Snow machine; power cable, hanging bracket with 2pcs screws; user manual;

II. Installation

1. Place the machine in a horizontal position. Fill the tank with Snow liquid and cover it tightly. Use only Snow liquid recommended by your dealer.
2. Please note this snow machine has an in-built wireless receiver, after powering the unit on, operate this snow machine by pressing the wireless remote control.
3. Check and make sure the rated power is in correspondence with the local power voltage, and then power the unit on, the indicator light will turn on showing that the machine is power on.
4. Press any button of "A, C, D" on the wireless remote control to start outputting snow. And you can move your finger away from the controller, no need to keep pressing the button, as the machine will keep on outputting snow. To stop the output of snow just press the button B on remote.

III. Caution:

1. This machine must be used indoors, Please make sure the installation position has good ventilation and low humidity, keep away from flammable and explosive objects.
2. Install the machine on the hanging bracket, and make sure the horizontal level difference is less than 15°.
3. Make sure the machine has enough liquid before working and make sure you are using high quality and reliable snow liquid. Use only Snow liquid recommended by your dealer as bad quality snow liquid will damage the machine.

4. Some noise will occur like wind when operating, this is normal.
5. Make sure you turn off the snow machine after finishing working or repairing.
6. The snow liquid is prohibited from swallowing and please screw the lid of the snow liquid bottle to avoid liquid leaking and keep the liquid clean and pure.

IV. Maintenance

1. After 40 hours of operation, clean the machine by inputting purified water into the empty liquid container and run on the snow machine to clean the snow machine to keep the snow outputting smoothly.
2. Clean the snow cloth and percolator regularly. Keep away the snow machine from dust.

V. Problem shooting

On case only small snowflakes or no snowflakes going out, unplug the power, and make the following check:

- Check the liquid to see whether it is enough
- Check the snow cloth and the percolator
- Check the fuse inside
- Check the power plug and the wireless remote controller
- If captioned parts are ok, please try to re-plug the machine
- Contact a qualified professional for assistance if these steps do not work.